



5 Commonwealth Ave
Woburn, MA 01801
Phone 781-665-1400
Toll Free 1-800-517-8431



Visit us at www.TestEquipmentDepot.com

NAVAC

Empowering you to work smarter

Recovery Unit for Flammable Refrigerants NRDDF User Manual



Failure to follow warnings could
result in death or serious injury.

**SAVE THIS MANUAL
FOR FUTURE REFERENCE**



TABLE OF CONTENT


Certifications	01
General Safety	02
Operation Manual	04
Specification	05
Introduction of Operation Panel	06
Parts Diagram	08
Wiring Diagram	09
Operating Instruction	
1). Refrigerant Hoses Exhaust	10
2). Recovery Mode	11
3). Self-purge Mode.....	12
4). Liquid Push/Pull Mode	13
Trouble Shooting	14

CERTIFICATIONS

Design standard: UL 121201: Ninth Edition
 CSA-C22.2 No.213-17
 UL 1963: Fourth Edition
 CSA-C22.2 No.120-13
 IEC: 60079-0, 60079-7

Marking: Class I, Division 2, Group D T4

  **Refrigerant Recovery Equipment SA45503**

 **WEEE (Do not dispose through typical waste streams)**

IN ACCORDANCE WITH SECTION 608 OF THE CLEAN AIR ACT:
 THIS EQUIPMENT HAS BEEN CERTIFIED BY UNDERWRITERS LABORATORIES INC. TO MEET EAP'S MINIMUM REQUIREMENT FOR RECOVERY EQUIPMENT INTENDED FOR USE WITH CATEGORY III, IV, AND V REFRIGERANTS OUTLINED IN AHRI-740-98, TABLE 4.

GENERAL SAFETY

Use information

- In order to prolong the life cycle of the recovery unit, please read the manual carefully before using to fully understand the safety, specification as well as operating procedure of the recovery unit.
- Please check the product received is same as you ordered.
Please check the product if there is any damage during transportation.
Contact with local distributor if the above problem is found.
- Please read the manual carefully and use the unit according to the product operating procedures.

Safety indication

Warning

This mark indicates procedures that must be strictly observed to prevent hazards to people.

Notice

This mark indicates procedures must be strictly observed to prevent damage or destruction of the unit.

Matters needing attention

Warning

For recovering only HVAC/R refrigerants from sealed HVAC/R systems. Warranty VOIDED if used for any other purposes.

Only a qualified technician should operate this recovery unit.

Before starting the equipment, make sure that it is well grounded.

If using electrical extension cord, the cord must be in good condition and properly connected and grounded.

Only a qualified electrician can do the wire connection according to the technical standard and circuit diagram.

The power must be cut off and no display in LCD before inspecting or repairing.

If the original power supply cord is damaged, an OEM replacement may be ordered through your NAVAC distributor.

Please check the capacity of your power supply, ammeter, electrical wires and circuit before use.

Only authorized refillable refrigerant tanks can be used. The setting of the pressure limiting device shall not be lower than 45 bar(653psi). Do not overfill the recovery tank, maximum at 80% capacity to make sure that there is enough space for liquid expansion. Overfilling of the tank may cause a violent explosion.

GENERAL SAFETY

Always wear safety goggles and protective gloves while working with refrigerants to protect your skin and eye from hurting by refrigerant gases or liquid.

Do not use this equipment near flammable liquid or gasoline.

A digital scale is needed to prevent overfilling.

Be sure that the place where you are working is thoroughly ventilated.

Before connecting, be sure to turn on the refrigerator to check:

1. If the fan is working properly (if there's air blowing out from the condenser side).
2. Connect the check valve to the outlet port and close the check valve. Keep the inlet port open to atmosphere. Turn the knob to the "FAST" position and start the machine. The pressure on the outlet side should rise to 560Psi (38.6bar) within 65secs. After that, the high pressure switch protection switch is on, and the machine will automatically shut down.

Notice

Be sure the unit is working under the right power supply.

When using an extension cord it should be minimum 14 AWG and no longer than 25 feet, otherwise it may cause the voltage drop and damage the compressor.

The input pressure of the unit should not exceed 26bar (377.0psi) .

The unit need to be laid in horizontally, otherwise it will lead to unexpected vibration, noise or even abrasion.

Do not expose the equipment to sun or rain.

The ventilation opening of the unit must not be blocked.

If the overload protector pops, reposition it after 5 minutes.

When doing self purging operation, the knob must be turned slowly to "PURGE" to ensure the inlet pressure is less than 5 bar (72.5 psi).

If fluid hammer happens in the recovery, please turn the knob slowly to "SLOW" position and do not let reading pressure drop to zero.

When you select fast model to start work, please monitor output pressure, if the output pressure increase fast to 27bar(391.6 psi), please turn to slow mode slowly and monitor the outlet pressure not exceeding 35bar(507.6 psi).

The equipment is intended for serving air-conditioning and refrigeration systems containing less than 200 lbs of high-pressure refrigerant.

The tank and hose used must comply with the local regulations.

OPERATION MANUAL


- Do not mix different refrigerants together in one tank, otherwise they could not be separated or used.
- Before recovering the refrigerant, the tank should achieve the vacuum level: -29.6inHg , for purge non-condensable gases. Each tank was full of nitrogen when it was manufactured in the factory, thus the nitrogen should be evacuated before first use.
- The knob should be in the "Close" Position before operation. All the valves must be closed, the input and output fittings should be covered with protective caps when the unit is not in operation. The air/ moisture is harmful to the recovery result and will shorten the life span of the unit.
- A filter drier should always be used and should be replaced regularly. And each type of refrigerant must have its own filter. For the sake of ensuring the normal operation of the unit, please use highquality filter drier specified by our company. A high quality filter drier will help protect machine.
- Special-caution is needed when recovering from system, and two dry filters are needed.
- The unit has an Internal High Pressure protector. If the pressure inside the system is above rated shut-off pressure (see specification), compressor will automatically shut off and the HP cutoff shows. To restart the compressor, please lower the internal pressure (Output gauge indicates lower than $35\text{ bar}/507.6\text{ PSI}$), after the HP cutoff blinks, then Press the "START" button to restart the compressor. When high pressure protection initiates, please determine the cause and deal with it before restarting the unit.
 - The input valve of the refrigerant tank is closed— opening the valve will help solve the problem.
 - The connecting hose between the recovery unit and refrigerant tank is plugged —close all the valves and replace the connecting hose.
 - The temperature of the refrigerant tank is too high, causing high pressure— cool the tank down.

SPECIFICATION


NRDDF	
Refrigerants	Category III: R12, R134a, R401C, R500, R1234YF, R600a Category IV: R22, R401A, R401B, R402B, R407C, R407D, R408A, R409A, R411A, R411B, R412A, R502, R509, R290 Category V: R32, R402A, R404A, R407A, R407B, R410A, R507
Power	115V, 60Hz
Motor	Brushless Motor, 1 HP
Motor Speed	3000 RPM
Maximal Current Draw	12A
Compressor	Oil-less, Air-cooled, Piston
High Pressure Protector	38.5bar/3850kpa(558psi)
Operating Temperature	32~104°F
Dimensions	14.5x9.9x11.7 inch
Net Weight	25 lbs

NRDDF

Refrigerants	R-22a	R-134a	R-410a
High Temp Vapor	0.62 lbs/min	N/A	N/A
Direct Vapor	0.55 lbs/min	0.37 lbs/min	0.49 lbs/min
Direct Liquid	6.88 lbs/min	5.34 lbs/min	7.98 lbs/min
Push/pull Liquid	14.2 lbs/min	11.0 lbs/min	15.1 lbs/min

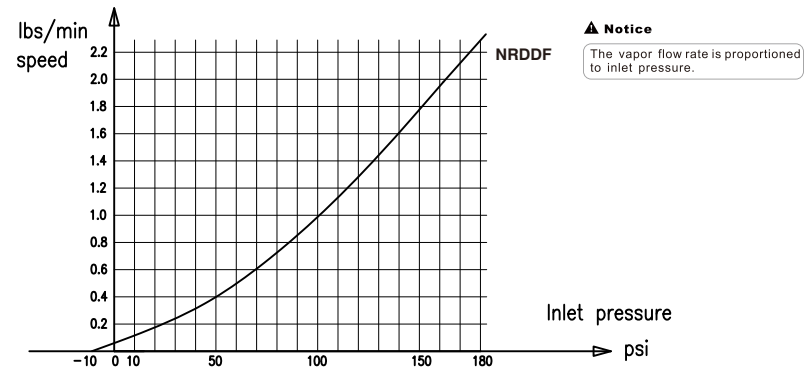

INTRODUCTION OF OPERATION PANEL

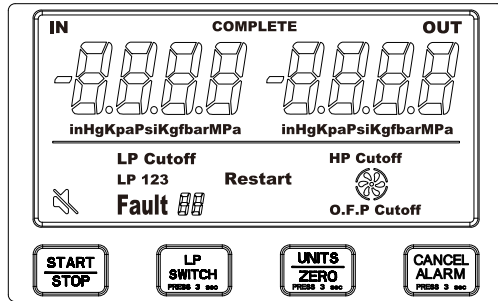



- Start/Stop: Starts and Stops recovery unit.
- LP Switch: Hold for 3 seconds to switch between LP1, LP2, LP3.
- Units/Zero: Press to change units to InHg, Kpa, Psi, Kg/f, Bar, Mpa. Hold for 3 seconds to zero out readings.
- Cancel Alarm: Hold for 3 seconds to mute recovery unit.
- **LP1: (Auto shutoff with manual restart)**
if the inlet pressure is lower than -20inHg for 20 seconds, the unit will shut down. "LP Cutoff" will be displayed. When $LP \geq 0$ inHg you must press START to restart the recovery unit
- **LP2: (Auto shutoff with automatic restart)**
if the inlet pressure is lower than -20inHg for 20 seconds, the unit will shut down. "LP Cutoff" is displayed. When $LP \geq 0$ inHg the unit will restart automatically.
- **LP3: (Continuous Run)**
The recovery unit will run continuously, no matter what the level the input pressure is (LP)
- O.F.P Cutoff: Will light up when the recovery cylinder is 80% filled, or if the OFP cable is opened. The machine will stop running.
- LP Cutoff: will light up when low pressure switch is activated for more than 20 seconds below -20 inHg.
- HP Cutoff: Will light up when high pressure switch is activated above 560 Psi.

Restart: It will flash after an error has occurred and settled. Pressing "START" will resume activity.



Fault: Error Codes

- E1: The pressure sensor is disconnected
- Fault 2: Input voltage is too low
- Fault 3: High input voltage
- Fault 4: Overcurrent protection
- Fault 7: Temperature protector open
- Fault 8: Motor stalling

 Mute: Audible alerts and beeps are turned off.

 Fan: This icon rotates while the machine is running. When the machine stops, the icon stops rotating.

INTRODUCTION OF OPERATION PANEL

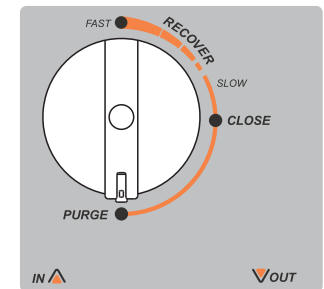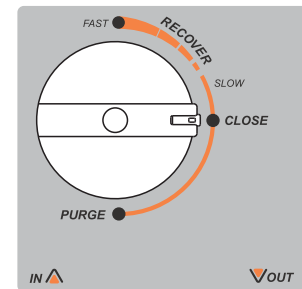


Close: Inlet valve is closed

Recover: Input valve is partially opened

Fast: Input valve is fully opened


Purge: Input closed, and output is opened to allow the unit to remove most of the refrigerant inside the recovery machine

PARTS DIAGRAM

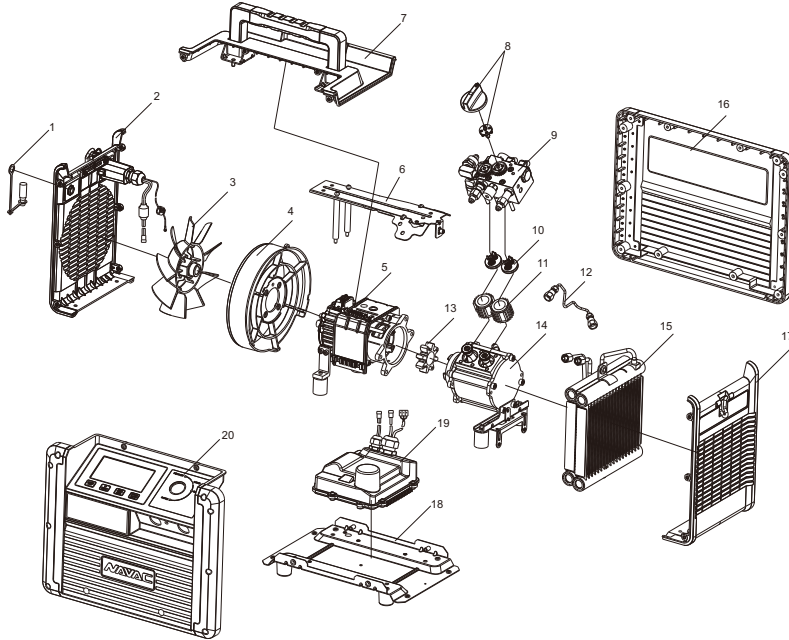

NO.	Parts name	NO.	Parts name
1	O.F.P. Adaptor Assy	11	Cylinder
2	Left side Plate	12	Copper Pipe
3	Fan	13	Coupling
4	Wind Guide Cover	14	Compressor
5	Motor	15	Condenser
6	Support Assy	16	Rear Plate
7	Top Plate	17	Right Side Plate
8	Knob	18	Base
9	Control Assy	19	Motor Control Board (MCB)
10	Valve Assy	20	Front Side Plate with Digital Manifold Gauge



WIRING DIAGRAM

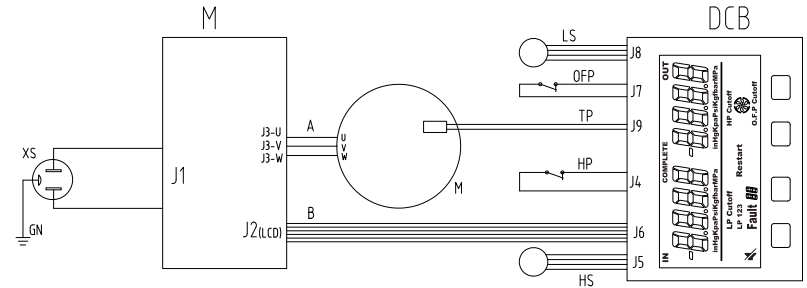

Graphics Code	ITEM
HS	High pressure sensor
M	Motor
MCB	Motor control board
XS	Socket
DCB	Digital gauge control board
LS	Low pressure sensor
OFP	Over filling protector
TP	Temperature protector
HP	High pressure switch

OPERATING INSTRUCTION

1). Refrigerant hoses exhaust

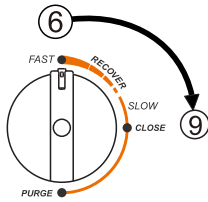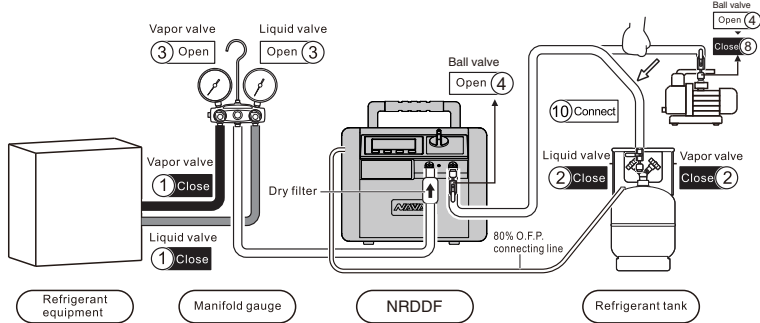

Preparation

It's required to use hoses with ball valves on this recovery machine. Connect the hose correctly and firmly (see diagram above)



1. Check the refrigeration device and make sure the gas valve and liquid valve are closed.
2. Check the refrigerant tank and make sure the gas valve and liquid valve are closed.
3. Open the gas valve and liquid valve of the manifold gauge.
4. Open the ball valves on the recovery machine outlet and valves on the hose connected to the outlet
5. Power on the recovery machine, the LCD screen will display the inlet and outlet pressures.
6. Turn the knob to "FAST".

Start

7. Start the vacuum pump and let it run until the recovery machine's display (low pressure) shows above -20inHg.
8. Close the ball valve of the vacuum pump hose which is connected to the refrigerant tank.
9. Turn the knob to "Close".
10. Connect the recovery machine outlet to the refrigerant tank with a hose.

OPERATING INSTRUCTION

2). Recovery mode

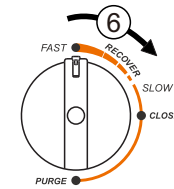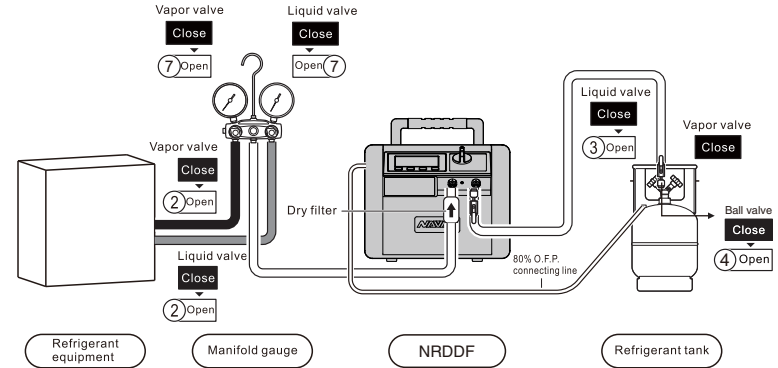

Preparation

Connect the hoses correctly and firmly. (Please refer to the connection diagram)

Make sure all valves are closed.

1. Switch off the power of refrigerant equipment.
2. Open the vapor and liquid valves of refrigerant equipment.
3. Open the vapor valve of the refrigerant tank.
4. Open the ball valves on the hose connected to the recovery machine outlet

Start operation

5. Press the "START" button to start machine.
6. Turn the knob to "Recover".
- 7.a. If recover liquid refrigerant, please open the liquid valve of the manifold gauge.
- b. If recover vapor refrigerant, please open the vapor valve of the manifold gauge.

8. Recovery is completed when machine enters into a vacuum. In Automatic shutoff this would be at -20inHg

9. When recovery is completed, you can run self-purging right away without powering off.

▲ Notice


- ① If liquid hammer happens in the recovery, please slowly turn the knob to "Slow" position, let the reading of the low-pressure gauge drops until liquid hammer stops. Do not let the reading drop to zero, otherwise the inlet port will not pump.
- ② If it is difficult to start, turn to "CLOSE" when liquid, turn to "PURGE" when vapor, then press "START" to restart the machine, and turn to the required position.

OPERATING INSTRUCTION

3). Self-purge mode

▲ Notice

The unit must be purged every time after use;
Liquid refrigerant remained may expand and damage the components and pollute the environment.

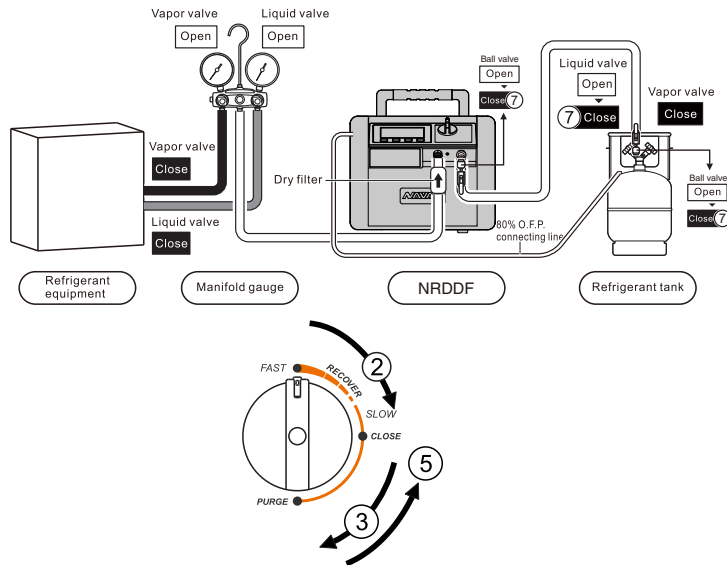

Start operation

1. The machine stops automatically after recovery finished based on LP cutoff setting.
2. Turn the knob to "Close", press "START" button to start the machine.
3. Turn the knob to "Purge" and start self purging.
4. The self purging mode will be finished when machine automatic stops or runs to certain vacuum level.

Finish operation


5. Turn the knob to "Close".
6. After confirming the machine has stopped, unplug the power cord from the charger to the power socket first, then unplug the cord from the charger to the recovery machine to avoid sparks.
7. Close the ball valves at both ends of the outlet hose.
8. Close the vapor valve of the tank.
9. Remove all the hoses and recycle them properly.

OPERATING INSTRUCTION

4). Liquid push/pull mode

▲ Notice

An electronic scale is needed to monitor the recovery process to prevent overfilling.

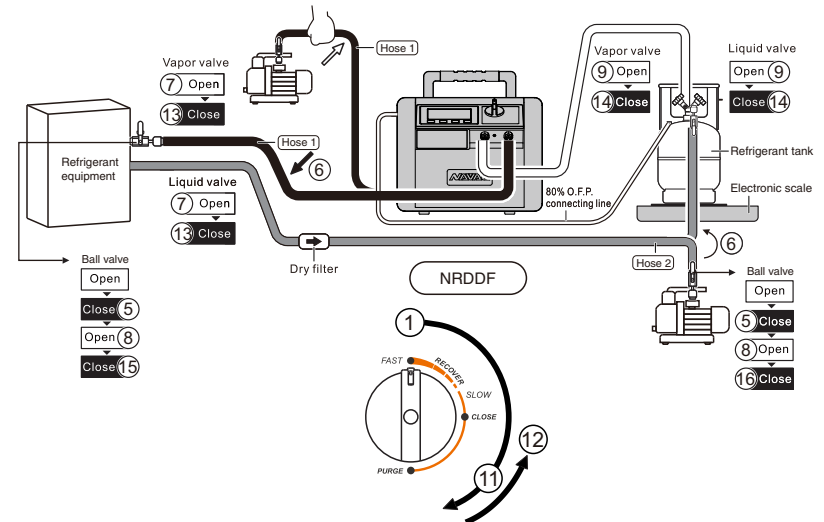

Preparation

Connect the hoses correctly and firmly.
(Please refer to the connection diagram)
Make sure all valves are closed.

1. Turn the knob to "FAST".
2. Connect (hose 1) to the vacuum pump.
3. Start the vacuum pump to pump the vacuum.
4. Let the vacuum pump run for 20 secs, close the ball valve on (hose 1), turn off the vacuum pump, and remove the hose from the vacuum pump.
5. Connect (hose 2) and repeat step 2, 3, 4
6. Connect the hoses to the gas port of the system and the liquid port of the refrigeration tank.

Start operation

7. Open the vapor valve, liquid valve of the HVAC system.
8. Open the ball valves on the connecting (hose 1) and (hose 2)

9. Open the vapor valve, liquid valve of the tank.
10. Press "START" button to start machine, then it starts liquid push/pull mode.

* If the reading on the scale keeps the same or changes slowly, it means liquid in HVAC system has been recovered and vapor recovery mode can be underway.

11. Turn the knob slowly to "Purge" and start self purging mode for the liquid.
12. Turn the knob to "Close"
13. Close the vapor valve, liquid valve of the HVAC system.
14. Close the vapor valve, liquid valve of the tank.
15. Close the ball valves on the hose connecting the recovery machine outlet and the system.
16. Close the ball valves on the hose connecting the refrigerant tank and the system.
17. Reconnect the hoses, and start recovery mode for the vapor.

Finish

